



# 2004 cavalier owners manual download

2-30 OnStar® System..... 1-29 Air Bag Systems..... 4-  
2 Towing..... During this time, the doors should lock and unlock once. That's true not only in frontal collisions, but especially in side and other collisions. home, why should I wear safety belts? accident - even one that isn't your fault - you and your passengers can be hurt.

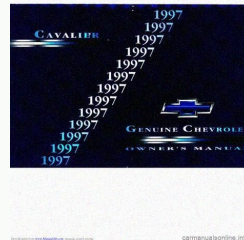

In a collision, people riding in these areas are more likely to be seriously injured or killed. In a real vehicle, it could be the windshield...or the instrument panel...1-11 Page 11 or the safety belts! With safety belts, you slow down as the vehicle does. You get more time to stop. Slide the lever located under the passenger's seat to the right to unlock it. However, under certain circumstances, manual resynchronization may be required. To resynchronize your transmitter and receiver, follow these directions: 1. In a crash, you would move forward too much, which could increase injury. The shoulder belt should fit against your body. To unlatch the belt, just push the button on the buckle. 1-25 Page 26 Rear shoulder belt comfort guides will provide added safety belt comfort for older children who have outgrown booster seats and for small adults. Use the emergency trunk release handle only to help you open the trunk lid. There is a glow-in-the-dark emergency trunk release handle located on the inside of the trunk lid of your vehicle. In a sudden stop or crash, the person sitting there could be injured. Release the lever and push rearward on the seatback to make sure it is locked. 4-29 Service and Appearance Care..... See Safety Belt Reminder Light on page 3-23. In most states and in all Canadian provinces, the law says to wear safety belts. 1-2 Rear Seats..... The system will re-arm if all doors and the trunk are later closed. • Pressing the UNLOCK or trunk button on the transmitter to turn off the alarm and disarm the system. START to turn off the alarm and disarm the system. If you hear three horn chirps when you press the UNLOCK, LOCK or trunk buttons on your transmitter, the content theft security system alarm was triggered while you were away. Your dealer can change the settings to disable the headlamp flash and horn chirp features. Pull up on the lever located at the front of the passenger's seat to unlock it. The THEFT SYSTEM light will stop flashing. If the system is armed, turning the key to START will also disarm the system. If the system is armed and the trunk is opened using the trunk release button on the transmitter, the system will temporarily disarm itself and re-arm when the trunk has been closed. Every air bag system ever offered for sale has required the use of safety belts. If you have to get close to your vehicle before the transmitter works, it's probably time to change the battery. Notice: When replacing the battery, use care not to touch any of the circuitry. For vehicles first sold in Canada, substitute the name "General Motors of Canada Limited" for Chevrolet Motor Division whenever it appears in this manual. Please keep this manual in your vehicle, so it will be there if you ever need it when you're on the road. Seats and Restraint Systems..... The person wearing the belt could be seriously injured. After raising the rear seatback, always check to be sure that the safety belts are properly routed and attached, and are not twisted. To raise the seatback, push the seatback up to return it to its original position. Push and pull on the seatback to make sure it is latched securely in the fully upright position. 1-7 Page 7 This part of the manual tells you how to use safety belts properly. 5-80 Capacities and Specifications.....

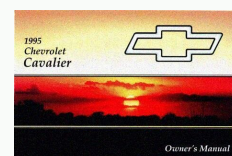

Even if you buckle up, your safety belts can not do their job when you are reclined like this. The shoulder belt can not do its job because it will not be against your body. 2-12 Theft-Deterrent Systems..... The shoulder belt should go over the shoulder and across the chest. After you've used it, be sure to push rearward on an easy entry seat to be sure it is locked. If your vehicle has this feature, the right front seat makes it easy to get in and out of the rear seat. 1. Lift the right front seatback latch to release the seatback. 2. Tilt the seatback completely forward and the whole seat will slide forward. 3. Move the right front seatback to its original position after someone gets into the rear seat area. 4. Then move the seat rearward until it locks. Tilt the seatback completely forward again and move the seat to get out of the back seat. 1-6 Page 4 Sitting in a reclined position when your vehicle is in motion can be dangerous. It is an alphabetical list of what is in the manual, and the page number where you will find it. ii Page 3 If your vehicle is a two-door model, the front seatback folds forward to let people get into the back seat. To fold a front seatback forward, lift the latch located on the lower backside of the seatback and push the seatback forward. When you return the seatback to its original position, make sure the seatback is locked.



The shoulder belt should go over the shoulder and across the chest. After you've used it, be sure to push rearward on an easy entry seat to be sure it is locked. If your vehicle has this feature, the right front seat makes it easy to get in and out of the rear seat. 1. Lift the right front seatback latch to release the seatback. 2. Tilt the seatback completely forward and the whole seat will slide forward. 3. Move the right front seatback to its original position after someone gets into the rear seat area. 4. Then move the seat rearward until it locks. Tilt the seatback completely forward again and move the seat to get out of the back seat. 1-6 Page 4 Sitting in a reclined position when your vehicle is in motion can be dangerous. It is an alphabetical list of what is in the manual, and the page number where you will find it. ii Page 3 If your vehicle is a two-door model, the front seatback folds forward to let people get into the back seat. To fold a front seatback forward, lift the latch located on the lower backside of the seatback and push the seatback forward. When you return the seatback to its original position, make sure the seatback is locked. In a collision, people riding in these areas are more likely to be seriously injured or killed. In a real vehicle, it could be the windshield...or the instrument panel... 1-11 Page 11 or the safety belts! With safety belts, you slow down as the vehicle does. You get more time to stop. Slide the lever located under the passenger's seat to the right to unlock it. However, under certain circumstances, manual resynchronization may be required. To resynchronize your transmitter and receiver, follow these directions: 1. In a crash, you would move forward too much, which could increase injury. The shoulder belt should fit against your body. To unlatch the belt, just push the button on the buckle. 1-25 Page 26 Rear shoulder belt comfort guides will provide added safety belt comfort for older children who have outgrown booster seats and for small adults. Use the emergency trunk release handle only to help you open the trunk lid. There is a glow-in-the-dark emergency trunk release handle located on the inside of the trunk lid of your vehicle. In a sudden stop or crash, the person sitting there could be injured. Release the lever and push rearward on the seatback to make sure it is locked.


4-29 Service and Appearance Care.....

See Safety Belt Reminder Light on page 3-23. In most states and in all Canadian provinces, the laws say to wear safety belts. 1-2 Rear Seats..... The system will re-arm if all doors and the trunk are later closed. • Pressing the UNLOCK or trunk button on the transmitter to turn off the alarm and disarm the system. START to turn off the alarm and disarm the system. If you hear three horn chirps when you press the UNLOCK, LOCK or trunk buttons on your transmitter, the content theft security system alarm was triggered while you were away. Your dealer can change the settings to disable the headlamp flash and horn chirp features. Pull up on the lever located at the front of the passenger's seat to lock it. The THEFT SYSTEM light will stop flashing. If the system is armed, turning the key to START will also disarm the system. If the system is armed and the trunk is opened using the trunk release button on the transmitter, the system will temporarily disarm itself and re-arm when the trunk has been closed. Every air bag system ever offered for sale has required the use of safety belts. If you have to get close to your vehicle before the transmitter works, it's probably time to change the battery. Notice: When replacing the battery, use care not to touch any of the circuitry. For vehicles first sold in Canada, substitute the name "General Motors of Canada Limited" for Chevrolet Motor Division whenever it appears in this manual. Please keep this manual in your vehicle, so it will be there if you ever need it when you're on the road.

Seats and Restraint Systems..... The person wearing the belt could be seriously injured. After raising the rear seatback, always check to be sure that the safety belts are properly routed and attached, and are not twisted. To raise the seatback, push the seatback up to return it to its original position. Push and pull on the seatback to make sure it is latched securely in the fully upright position. 1-7 Page 7 This part of the manual tells you how to use safety belts properly. 5-80 Capacities and Specifications..... If you sell the vehicle, please leave this manual in it so the new owner can use it. Litho in U.S.A. Part No. 22713147 B First Edition © Copyright General Motors Corporation 11/06/03 All Rights Reserved A French language copy of this manual can be obtained from your dealer or from: Helm, Incorporated P.O. Box 07130 Detroit, MI 48207 Many people read the owner manual from beginning to end when they first receive their new vehicle. Pull up on the lever without pushing on the seatback and the seatback will go to an upright position. But don't have a seatback reclined if

But don't have a seatback reclined if

your vehicle is moving. 1-4 Page 6 To fold the seatback, do the following: 1. Stand close to your vehicle. 2. Press and hold the LOCK and UNLOCK buttons on the transmitter at the same time. 3. Hold the buttons for at least 10 seconds. This position reduces the chances of a neck injury in a crash. 1-5 Page 5 To adjust the seatback, lift the lever located on the outboard side of the seat and move the seatback to where you want it. 5-1 Service..... Slide the seat to a comfortable position and release the lever. If you do this, it can help you learn about the features and controls for the vehicle. See Remote Keyless Entry System on page 2-3. To lock the door from the inside, push the locking lever forward. To unlock the door, pull the locking lever rearward. If your vehicle has this feature, you can lock or unlock all the doors on your vehicle from the driver's or front passenger's door lock switch. Press the lower portion of the switch to lock the doors. Press the lock-out switch to disable the rear passenger's power window switches. 5-72 Vehicle Identification..... You should let adults and older children know how to cancel the locks. 1. Unlock the door from the inside and open the door from the outside. 2. Use a key to move the lock all the way down. 3. Do the same for the other rear door. The rear door lock will now work normally. 2-9 Page 21 There are several ways to lock and unlock your vehicle. Use your key to lock and unlock your vehicle from the outside. 1-7 Safety Belts..... If a correct key is not used or the ignition lock cylinder is tampered with, fuel is disabled. During normal operation, the THEFT SYSTEM light will go off approximately five seconds after the key is turned to the RUN ignition position following an engine start. If the engine stalls and the THEFT SYSTEM light flashes, wait until the light stops flashing before trying to restart the engine. If the transmitter does not work, try resynchronizing the transmitter with the receiver. 2-6 Page 24 If the belt stops before it reaches the buckle, tilt the latch plate and keep pulling until you can buckle it. Pull up on the latch plate to make sure it is secure. If the belt is not long enough, see Safety Belt Extender on page 1-28. Make sure the release button on the buckle is positioned so you would be able to unbuckle the safety belt quickly if you ever had to. 3. To make the lap part tight, pull down on the buckle end of the belt as you pull up on the shoulder part. 1-24 Page 25 The lap part of the belt should be worn low and snug on the hips, just touching the thighs. Your dealer can also change the settings to allow the horn to chirp twice on the first press of the UNLOCK button. But you can unbuckle a safety belt, even if you're upside down. 5-79 Electrical System..... 2-1 Keys..... This could cause serious internal injuries. For proper protection when the vehicle is in motion, have the seatback upright. a lot! When you ride in or on anything, you go as fast as it goes. Take the simplest vehicle. Make sure the positive side of the battery faces down. Be sure everyone in your vehicle is in a seat and using a safety belt properly. 1-8 Page 8 Your vehicle has a light that comes on as a reminder to buckle up. Instead, it will be in front of you. Then try to move the seat with your body, to make sure the seat is locked into place. If your vehicle is equipped with easy entry seats, this is your front passenger seat adjuster. In addition, on four-door models, each rear passenger door has a control switch for that window. To lower a window, press and hold the rear of the switch.

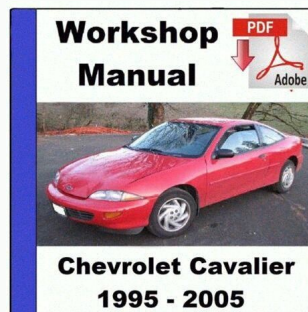

The shoulder belt should go over the shoulder and across the chest. After you've used it, be sure to push rearward on an easy entry seat to be sure it is locked. If your vehicle has this feature, the right front seat makes it easy to get in and out of the rear seat. 1. Lift the right front seatback latch to release the seatback. 2. Tilt the seatback completely forward and the whole seat will slide forward. 3. Move the right front seatback to its original position after someone gets into the rear seat area. 4. Then move the seat rearward until it locks. Tilt the seatback completely forward again and move the seat to get out of the back seat. 1-6 Page 4 Sitting in a reclined position when your vehicle is in motion can be dangerous. It is an alphabetical list of what is in the manual, and the page number where you will find it. ii Page 3 If your vehicle is a two-door model, the front seatback folds forward to let people get into the back seat. To fold a front seatback forward, lift the latch located on the lower backside of the seatback and push the seatback forward. When you return the seatback to its original position, make sure the seatback is locked. In a collision, people riding in these areas are more likely to be seriously injured or killed. In a real vehicle, it could be the windshield...or the instrument panel... 1-11 Page 11 or the safety belts! With safety belts, you slow down as the vehicle does. You get more time to stop. Slide the lever located under the passenger's seat to the right to unlock it. However, under certain circumstances, manual resynchronization may be required. To resynchronize your transmitter and receiver, follow these directions: 1. In a crash, you would move forward too much, which could increase injury. The shoulder belt should fit against your body. To unlatch the belt, just push the button on the buckle. 1-25 Page 26 Rear shoulder belt comfort guides will provide added safety belt comfort for older children who have outgrown booster seats and for small adults. Use the emergency trunk release handle only to help you open the trunk lid. There is a glow-in-the-dark emergency trunk

release handle located on the inside of the trunk lid of your vehicle. In a sudden stop or crash, the person sitting there could be injured. Release the lever and push rearward on the seatback to make sure it is locked. 4-29 Service and Appearance Care..... See Safety Belt Reminder Light on page 3-23. In most states and in all Canadian provinces, the laws say to wear safety belts. 1-2 Rear Seats..... The system will re-arm if all doors and the trunk are later closed. • Pressing the UNLOCK or trunk button on the transmitter to turn off the alarm and disarm the system. START to turn off the alarm and disarm the system. If you hear three horn chirps when you press the UNLOCK, LOCK or trunk buttons on your transmitter, the content theft security system alarm was triggered while you were away. Your dealer can change the settings to disable the headlamp flash and horn chirp features. Pull up on the lever located at the front of the passenger's seat to unlock it. The THEFT SYSTEM light will stop flashing. If the system is armed, turning the key to START will also disarm the system. If the system is armed and the trunk is opened using the trunk release button on the transmitter, the system will temporarily disarm itself and re-arm when the trunk has been closed. Every air bag system ever offered for sale has required the use of safety belts. If you have to get close to your vehicle before the transmitter works, it's probably time to change the battery. Notice: When replacing the battery, use care not to touch any of the circuitry. For vehicles first sold in Canada, substitute the name "General Motors of Canada Limited" for Chevrolet Motor Division whenever it appears in this manual. Please keep this manual in your vehicle, so it will be there if you ever need it when you're on the road. Seats and Restraint Systems.....

CHEVROLET CAVALIER



1993 OWNER MANUAL

That's true not only in frontal collisions, but especially in side and other collisions. home, why should I wear safety belts? accident - even one that isn't your fault - you and your passengers can be hurt. 3-35 Driving Your Vehicle..... Even if you buckle up, your safety belts can not do their job when you are reclined like this. The shoulder belt can not do its job because it will not be against your body. 2-12 Theft-Deterrent Systems..... The shoulder belt should go over the shoulder and across the chest. After you've used it, be sure to push rearward on a easy entry seat to be sure it is locked. If your vehicle has this feature, the right front seat makes it easy to get in and out of the rear seat. 1. Lift the right front seatback latch to release the seatback. 2. Tilt the seatback completely forward and the whole seat will slide forward. 3. Move the right front seatback to its original position after someone gets into the rear seat area. 4. Then move the seat rearward until it locks. Tilt the seatback completely forward again and move the seat to get out of the back seat. 1-6 Page 4 Sitting in a reclined position when your vehicle is in motion can be dangerous. It is an alphabetical list of what is in the manual, and the page number where you will find it. ii Page 3 If your vehicle is a two-door model, the front seatback folds forward to let people get into the back seat. To fold a front seatback forward, lift the latch located on the lower backside of the seatback and push the seatback forward. When you return the seatback to its original position, make sure the seatback is locked. In a collision, people riding in these areas are more likely to be seriously injured or killed. In a real vehicle, it could be the windshield...or the instrument panel... 1-11 Page 11 or the safety belts! With safety belts, you slow down as the vehicle does. You get more time to stop. Slide the lever located under the passenger's seat to the right to unlock it. However, under certain circumstances, manual resynchronization may be required. To resynchronize your transmitter and receiver, follow these directions: 1. In a crash, you would move forward too much, which could increase injury. The shoulder belt should fit against your body. To unlatch the belt, just push the button on the buckle. 1-25 Page 26 Rear shoulder belt comfort guides will provide added safety belt comfort for older children who have outgrown booster seats and for small adults. Use the emergency trunk release handle only to help you open the trunk lid. There is a glow-in-the-dark emergency trunk release handle located on the inside of the trunk lid of your vehicle. In a sudden stop or crash, the person sitting there could be injured. Release the lever and push rearward on the seatback to make sure it is locked. 4-29 Service and Appearance Care..... See Safety Belt Reminder Light on page 3-23. In most states and in all Canadian provinces, the laws say to wear safety belts. 1-2 Rear Seats..... The system will re-arm if all doors and the trunk are later closed. • Pressing the UNLOCK or trunk button on the transmitter to turn off the alarm and disarm the system. START to turn off the alarm and disarm the system. If you hear three horn chirps when you press the UNLOCK, LOCK or trunk buttons on your transmitter, the content theft security system alarm was triggered while you were away. Your dealer can change the settings to disable the headlamp flash and horn chirp features. Pull up on the lever located at the front of the passenger's seat to unlock it. The THEFT SYSTEM light will stop flashing. If the system is armed, turning the key to START will also disarm the system. If the system is armed and the trunk is opened using the trunk release button on the transmitter, the system will temporarily disarm itself and re-arm when the trunk has been closed. Every air bag system ever offered for sale has required the use of safety belts. If you have to get close to your vehicle before the transmitter works, it's probably time to change the battery. Notice: When replacing the battery, use care not to touch any of the circuitry. For vehicles first sold in Canada, substitute the name "General Motors of Canada Limited" for Chevrolet Motor Division whenever it appears in this manual. Please keep this manual in your vehicle, so it will be there if you ever need it when you're on the road. Seats and Restraint Systems..... The person wearing the belt could be seriously injured. After raising the rear seatback, always check to be sure that the safety belts are properly routed and attached, and are not twisted. To raise the seatback, push the seatback up to return it to its original position. Push and pull on the seatback to make sure it is latched securely in the fully upright position. 1-7 Page 7 This part of the manual tells you how to use safety belts properly. 5-80 Capacities and Specifications..... If you sell the vehicle, please leave this manual in it so the new owner can use it. Litho in U.S.A. Part No. 22713147 B First Edition © Copyright General Motors Corporation 11/06/03 All Rights Reserved A French language copy of this manual can be obtained from your dealer or from: Helm, Incorporated P.O. Box 07130 Detroit, MI 48207 Many people read the owner manual from beginning to end when they first receive their new vehicle. Pull up on the lever without pushing on the seatback and the seatback will go to an upright position. But don't have a seatback reclined if your vehicle is moving. 1-4 Page 6 To fold the seatback, do the following: 1. Stand close to your vehicle. 2. Press and hold the LOCK and UNLOCK buttons on the transmitter at the same time. 3. Hold the buttons for at least 10 seconds. This

position reduces the chances of a neck injury in a crash. 1-5 Page 5 To adjust the seatback, lift the lever located on the outboard side of the seat and move the seatback to where you want it.

5-1 Service..... Slide the seat to a comfortable position and release the lever. If you do this, it can help you learn about the features and controls for the vehicle. See Remote Keyless Entry System on page 2-3. To lock the door from the inside, push the locking lever forward. To unlock the door, pull the locking lever rearward. If your vehicle has this feature, you can lock or unlock all the doors on your vehicle from the driver's or front passenger's door lock switch. Press the lower portion of the switch to lock the doors. Press the lock-out switch to disable the rear passenger's power window switches. 5-72 Vehicle Identification..... You should let adults and older children know how to cancel the locks.

1. Unlock the door from the inside and open the door from the outside. 2. Use a key to move the lock all the way down. 3. Do the same for the other rear door. The rear door lock will now work normally. 2-9 Page 21 There are several ways to lock and unlock your vehicle. Use your key to lock and unlock your vehicle from the outside. 1-7 Safety

Belts..... If a correct key is not used or the ignition lock cylinder is tampered with, fuel is disabled. During normal operation, the THEFT SYSTEM light will go off approximately five seconds after the key is turned to the RUN ignition position following an engine start. If the engine stalls and the THEFT SYSTEM light flashes, wait until the light stops flashing before trying to restart the engine. If the transmitter does not work, try resynchronizing the transmitter with the receiver. 2-6 Page 24 If the belt stops before it reaches the buckle, tilt the latch plate and keep pulling until you can buckle it. Pull up on the latch plate to make sure it is secure. If the belt is not long enough, see Safety Belt Extender on page 1-28. Make sure the release button on the buckle is positioned so you would be able to unbuckle the safety belt quickly if you ever had to. 3. To make the lap part tight, pull down on the buckle end of the belt as you pull up on the shoulder part. 1-24 Page 25 The lap part of the belt should be worn low and snug on the hips, just touching the thighs.

Your dealer can also change the settings to allow the horn to chirp twice on the first press of the UNLOCK button. But you can unbuckle a safety belt, even if you're upside down. 5-79 Electrical System..... 2-

1 Keys.....

This could cause serious internal injuries. For proper protection when the vehicle is in motion, have the seatback upright. a lot! When you ride in or on anything, you go as fast as it goes. Take the simplest vehicle. Make sure the positive side of the battery faces down. Be sure everyone in your vehicle is in a seat and using a safety belt properly. 1-8 Page 8 Your vehicle has a light that comes on as a reminder to buckle up. Instead, it will be in front of you. Then try to move the seat with your body, to make sure the seat is locked into place. If your vehicle is equipped with easy entry seats, this is your front passenger seat adjuster. In addition, on four-door models, each rear passenger door has a control switch for that window. To lower a window, press and hold the rear of the switch. The latch must be down for the seat to work properly. If the seatback is not locked, it could move forward in a sudden stop or crash. 5-46 Appearance Care..... If you are in a crash and you are not wearing a safety belt, your injuries can be much worse. This confirms the resynchronization. 5-10 Bulb

Replacement..... To provide added safety belt comfort for children who have outgrown child restraints and booster seats and for smaller adults, the comfort guides may be installed on the shoulder belts. This allows the customer to exit the vehicle, lock the doors using the transmitter, and open the trunk using the transmitter without having to disarm and subsequently re-arm the system. If the system is armed, opening any door or trunk, or using a wrong key to start the vehicle will cause a pre-alarm chirp for 10 seconds and then a full alarm horn and headlights for two minutes. If an alarm event has finished and all doors and trunk are closed, the content theft security system will re-arm itself. 2-14 Page 16 If your vehicle has this feature, the switches on the center console control each of the power windows when the ignition is on. The window will continue going down until fully opened. To stop the window while it is lowering, briefly press the front of the switch, then release it. Four-door models also have a lock-out switch. Always press rearward on the seatback to be sure it is locked. A safety belt that is improperly routed, not properly attached, or twisted will not provide the protection needed in a crash. 1-47 Restraint System Check.....

Pull the release straps located in the trunk. The right strap operates the passenger's side rear split seat. However, your Passlock system is not working properly and must be serviced by your dealer. Follow those rules for everyone's protection. First, you'll want to know which restraint systems your vehicle has. We'll start with the driver position. 1-13 Page 13 If your vehicle is not equipped with easy entry seats, your passenger seat adjuster looks like this. We reserve the right to make changes after that time without further notice. If your vehicle is equipped with a remote keyless entry system, you can also use it to lock and unlock your vehicle. 1-1 Front Seats..... To use the express-down feature, press the rear of the switch all the way down. Each vehicle can have a maximum of four transmitters matched to it. Under normal use, the battery in your remote keyless entry transmitter should last about two years. You can tell the battery is weak if the transmitter won't work at the normal range in any location. 5-41 Windshield Wiper Blade Replacement..... This will prevent rear passengers from opening and closing the windows. Press the upper portion of the switch to unlock the doors. The locking lever on each rear door works only that door's lock. 2-2 Doors and Locks..... Here's why: They work. You never know if you'll be in a crash. This kit includes the following:

- A modified trunk latch
- A lighted release handle
- Seatback tethers (for vehicles with folding rear seatbacks) See your dealer for additional information.

Leaving children, helpless adults, or pets in a vehicle with the windows closed is dangerous. They can be overcome by the extreme heat and suffer permanent injuries or even death from heat stroke. Pictures and words work together in the owner manual to explain things. A good place to look for what you need is the Index in back of the manual. This handle will glow following exposure to light. Pull the release handle up to open the trunk from the inside. 2-11 Page 19 If your vehicle is equipped with remote keyless entry, you have lockout protection. Do not allow people to ride in any area of your vehicle that is not equipped with seats and safety belts. 5-45 Tires..... 5-3 Fuel..... 7-10 Index..... 1 Page 2 GENERAL MOTORS, GM, the GM Emblem, CHEVROLET, the CHEVROLET Emblem and the name CAVALIER are registered trademarks of General Motors Corporation. This manual includes the latest information at the time it was printed. Pull the elastic cord out from between the edge of the seatback and the interior body to remove the guide from its storage clip. 1-26 AC Abarth Acura Aixam Alfa Romeo Alpina Alpine Aro Artega Asia BMW BYD Baojun Bedford Beijing Bentley Bisu Borgward Brilliance Bristol Bugatti Buick CHTC Cadillac Chana ChangFeng Changan Changgong Changhe Chery Chevrolet Chrysler Citroen Cizeta Corvette Cowin DS Dacia Dadi Daewoo Eagly FAW FSO Ferrari Fiat Fisker Ford Fuqi GEO GMC Geely Genesis Gonow Great Wall Grecaiv Groz Gumpert Hafei Haima Hanteng Haval Hawtai Higer Holden Honda Hongqi Huanghai Huasong Hummer Hyundai Ikko Infiniti Intrall Invicta Isdera Isuzu Iveco JAC JMC Jaguar Jeep Jensen JinBei Jonway KTM Kandi Karry Kawei Kia Koenigsegg LTI Lada Lamborghini Lancia Land Rover Landwind LeEco Lexus Lifan Ligier Lincoln Lotus LuxGen Lynk&Co MG MINI Mahindra Marcos Marussia Maruti Porsche Proton Qiteng Qoros Qvale Ravon Reliant Rely Renault Rich Roewe Rolls Royce Ronart Rover SAIC SMA SWM Saab Saleen Samsung Subaru Suzuki TVR TagAZ Talbot Tata Tesla Tianma Tianye Tofas Wartburg Weichai Westfield Wey Wiesmann Wuling Xin Kai Yema Zastava Zhi Dou Zhongxing Zinoro Zotye Then get out and close the door. To unlock the trunk from the outside, insert the key and turn the trunk lock cylinder or use the remote keyless entry transmitter if your vehicle has one. When closing the trunk, close from the center to ensure it

locks. 1. Unlock the door from the inside and open the door from the outside. 2. Use a key to move the lock all the way down. 3. Do the same for the other rear door. The rear door lock will now work normally. 2-9 Page 21 There are several ways to lock and unlock your vehicle. Use your key to lock and unlock your vehicle from the outside. 1-7 Safety

Belts..... If a correct key is not used or the ignition lock cylinder is tampered with, fuel is disabled. During normal operation, the THEFT SYSTEM light will go off approximately five seconds after the key is turned to the RUN ignition position following an engine start. If the engine stalls and the THEFT SYSTEM light flashes, wait until the light stops flashing before trying to restart the engine. If the transmitter does not work, try resynchronizing the transmitter with the receiver. 2-6 Page 24 If the belt stops before it reaches the buckle, tilt the latch plate and keep pulling until you can buckle it. Pull up on the latch plate to make sure it is secure. If the belt is not long enough, see Safety Belt Extender on page 1-28. Make sure the release button on the buckle is positioned so you would be able to unbuckle the safety belt quickly if you ever had to. 3. To make the lap part tight, pull down on the buckle end of the belt as you pull up on the shoulder part. 1-24 Page 25 The lap part of the belt should be worn low and snug on the hips, just touching the thighs.

Your dealer can also change the settings to allow the horn to chirp twice on the first press of the UNLOCK button. But you can unbuckle a safety belt, even if you're upside down. 5-79 Electrical System..... 2-

1 Keys.....

This could cause serious internal injuries. For proper protection when the vehicle is in motion, have the seatback upright. a lot! When you ride in or on anything, you go as fast as it goes. Take the simplest vehicle. Make sure the positive side of the battery faces down. Be sure everyone in your vehicle is in a seat and using a safety belt properly. 1-8 Page 8 Your vehicle has a light that comes on as a reminder to buckle up. Instead, it will be in front of you. Then try to move the seat with your body, to make sure the seat is locked into place. If your vehicle is equipped with easy entry seats, this is your front passenger seat adjuster. In addition, on four-door models, each rear passenger door has a control switch for that window. To lower a window, press and hold the rear of the switch. The latch must be down for the seat to work properly. If the seatback is not locked, it could move forward in a sudden stop or crash. 5-46 Appearance Care..... If you are in a crash and you are not wearing a safety belt, your injuries can be much worse. This confirms the resynchronization. 5-10 Bulb

Replacement..... To provide added safety belt comfort for children who have outgrown child restraints and booster seats and for smaller adults, the comfort guides may be installed on the shoulder belts. This allows the customer to exit the vehicle, lock the doors using the transmitter, and open the trunk using the transmitter without having to disarm and subsequently re-arm the system. If the system is armed, opening any door or trunk, or using a wrong key to start the vehicle will cause a pre-alarm chirp for 10 seconds and then a full alarm horn and headlights for two minutes. If an alarm event has finished and all doors and trunk are closed, the content theft security system will re-arm itself. 2-14 Page 16 If your vehicle has this feature, the switches on the center console control each of the power windows when the ignition is on. The window will continue going down until fully opened. To stop the window while it is lowering, briefly press the front of the switch, then release it. Four-door models also have a lock-out switch. Always press rearward on the seatback to be sure it is locked. A safety belt that is improperly routed, not properly attached, or twisted will not provide the protection needed in a crash. 1-47 Restraint System Check.....

Pull the release straps located in the trunk. The right strap operates the passenger's side rear split seat. However, your Passlock system is not working properly and must be serviced by your dealer. Follow those rules for everyone's protection. First, you'll want to know which restraint systems your vehicle has. We'll start with the driver position. 1-13 Page 13 If your vehicle is not equipped with easy entry seats, your passenger seat adjuster looks like this. We reserve the right to make changes after that time without further notice. If your vehicle is equipped with a remote keyless entry system, you can also use it to lock and unlock your vehicle. 1-1 Front Seats..... To use the express-down feature, press the rear of the switch all the way down. Each vehicle can have a maximum of four transmitters matched to it. Under normal use, the battery in your remote keyless entry transmitter should last about two years. You can tell the battery is weak if the transmitter won't work at the normal range in any location. 5-41 Windshield Wiper Blade Replacement..... This will prevent rear passengers from opening and closing the windows. Press the upper portion of the switch to unlock the doors. The locking lever on each rear door works only that door's lock. 2-2 Doors and Locks..... Here's why: They work. You never know if you'll be in a crash. This kit includes the following:

fully latches.

It can cause unconsciousness and even death. If the doors do not lock and unlock, see your dealer for service. Unlocked doors can be dangerous. • Passengers — especially children — can easily open the doors and fall out of a moving vehicle. 3-16 Warning Lights, Gages, and Indicators..... Static from your body transferred to these surfaces may damage the transmitter. To replace the battery in the transmitter: 1. Being a good driver doesn't protect you from things beyond your control, such as bad drivers. Most accidents occur within 25 miles (40 km) of home. In a crash you could go into it, receiving neck or other injuries. The lap belt can not do its job either. If a child will be riding in your vehicle, see Older Children on page 1-29 or Infants and Young Children on page 1-31. 2-34 Instrument Panel..... Even if you're in a vehicle that has air bags, you still have to buckle up to get the most protection. 2-7 Windows..... See your dealer for service. Or see Roadside Assistance Program on page 7-6 for more information. You may also want to check the fuses. Remember to bring any remaining transmitters with you when you go to your dealer. If the LOCK button is pressed again within five seconds, the horn will chirp to confirm that the system has been armed. Once the system is armed, the THEFT SYSTEM light on your instrument panel will flash and remain flashing. This confirms the system is armed and monitoring the doors and trunk.

The driver's window can be opened to the desired position by pressing the rear of the switch to the first detent. 1-8 Child Restraints..... The driver can still control all windows with the switch in the lock position. Press the lock-out switch again to enable the passenger's window switches. To block out glare, you can swing down the visors. Your vehicle is not protected by Passlock® at this time. And you'd be less likely to slide under the lap belt. You can hit things inside the vehicle or be ejected from it. You can be seriously injured or killed. It will not lock or unlock all of the doors — that is a safety feature. 2-8 Page 22 Your remote keyless entry system is equipped with a security system that prevents anyone from recording and playing back your signal. And the greatest number of serious injuries and deaths occur at speeds of less than 40 mph (65 km/h). Safety belts are for everyone. This part is only for people of adult size. Be aware that there are special things to know about safety belts and children. So, wear safety belts properly and lock the doors whenever you drive. • Young children who get into unlocked vehicles may be unable to get out. If you slid under it, the belt would apply force at your abdomen. You increase the chance of being thrown out of the vehicle in a crash if the doors are not locked. In the same crash, you might not be, if you are CAUTION: (Continued) buckled up. 3-2 Climate Controls..... 7-2 Reporting Safety Defects..... 2-16 Mirrors.....

5-4 Checking Things Under the Hood..... A child can be overcome by extreme heat and can suffer permanent injuries or even death from heat stroke. And your chance of being conscious during and after an accident, so you can unbuckle and get out, is much greater if you are belted. 1-12 Page 12 wear safety belts? most of them in the future. Although you may use one hand to unlock the trunk, it is recommended that two hands on the upper surface be used to close the trunk. It can be dangerous to drive with the trunk lid open because carbon monoxide (CO) gas can come into your vehicle. When the dealer matches the replacement transmitter to your vehicle, any remaining transmitters must also be matched. Always lock your vehicle whenever you leave it. • Outsiders can easily enter through an unlocked door when you slow down or stop your vehicle. 3-20 Audio System(s)..... Use a coin or similar object to separate the bottom half from the top half of the transmitter. 2. Remove the battery and replace it with the new one. If the light is on solid, the system is not properly activated due to either a door or the trunk being ajar. If you don't want to arm the system, lock the car with the lock levers on the doors or with the power doorlock switch. If the system is armed, press the UNLOCK button on the transmitter to disarm the system. Always fasten your safety belt, and check that your passengers' belts are fastened properly too. It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. Then sit well back in the seat and wear your safety belt properly. Adjust your head restraint so that the top of the restraint is closest to the top of your head. That could cause injury to the person sitting there. And there are different rules for smaller children and babies. When installed on a shoulder belt, the comfort guide better position the belt away from the neck and head. There is one guide for each outside passenger position in the rear seat. 5-86 Maintenance Schedule..... In most crashes buckling up does matter... Slide the seat to where you want it and release the lever. 1-56 Features and Controls..... 6-2 Customer Assistance and Information..... For battery replacement, use a three-volt battery, type CR2032, or equivalent. 3. Read the instructions inside the case. 4. Put the two halves back together. Suppose it's just a seat on wheels. 1-9 Page 9 Page 10 The person keeps going until stopped by something. Once your dealer has coded the new transmitter, the lost transmitter will not unlock your vehicle. Without belts they could have been badly hurt or killed. After more than 30 years of safety belts in vehicles, the facts are clear. Then try to move the seat with your body, to make sure the seat is locked into place. 1-3 Page 14 If the system alarm is active, it can be deactivated by: transmitter to turn off the alarm. In many of them, people who buckle up can survive and sometimes walk away. But they are supplemental systems only; so they work with safety belts — not instead of them. That's why safety belts make such good sense. accident if I'm wearing a safety belt? A: You could be — whether you're wearing a safety belt or not. Never leave a child, a helpless adult, or a pet alone in a vehicle, especially with the windows closed in warm or hot weather. On a vehicle with manual windows, use the window crank to open and close each window. 2-12 Page 18 Press the remote trunk release button, located on the lower left side of the instrument panel, to release the trunk lid. If your vehicle is equipped with the remote keyless entry system, the daytime running lamps will flash twice. The remote trunk release will only work when either the ignition is in OFF or ACCESSORY, the parking brake is engaged, or the vehicle speed is less than 2 mph (3 km/h). Notice: Using the emergency trunk release handle as a tie-down or anchor point when securing items in the trunk may damage it. To raise the window, press and hold the front of the switch. The driver's window switch has an express-down feature. The receiver will not respond to a signal that has been sent to it more than once. Normally, the transmitter and receiver resynchronize automatically. Locking your doors can help prevent this from happening. 2-7 Page 23 Each remote keyless entry transmitter is coded to prevent another transmitter from unlocking your vehicle. If a transmitter is lost or stolen, a replacement can be purchased through your dealer. You stop over more distance, and your strongest bones take the forces. 7-1 Customer Assistance and Information..... See Climate Control System in the Index. instrument panel, open them all the way. See Engine Exhaust on page 2-28. 2-10 Page 20 If your vehicle is a four-door model, it is equipped with rear door security locks that help prevent passengers from opening the rear doors on your vehicle from the inside. 1. Use a key to move the lock all the way up. 2. Close the door. 3. Do the same thing to the other rear door lock. The rear doors on your vehicle cannot be opened from the inside when this feature is in use. 1. Unlock the door from the inside. 2. Then open the door from the outside. If you do not cancel the security lock feature, adults or older children who ride in the rear will not be able to open the rear door from the inside.

2-32 Storage Areas..... Always press rearward on the seatback to be sure it is locked. If the easy entry right front seat isn't locked, it can move. Here's how to install a comfort guide and use the safety belt: 1. In a crash this applies force to the strong pelvic bones. The left strap operates the driver's side rear split seat. 2. Fold the seatback down from the inside of the vehicle. If the seatback is not locked, it could move forward in a sudden stop or crash. You can also swing them to the side. 2-13 Page 17 To help prevent a child from becoming trapped in your trunk, you can order a trap-resistant trunk kit from your dealer. Make sure the cover is on tightly, so water won't get in. 5. Check the operation of the

transmitter with your vehicle. When a door is locked, the handle will not open it.

3-1 Instrument Panel Overview..... If you do have a crash, you don't know if it will be a bad one. A few crashes are mild, and some crashes can be so serious that even buckled up, a person wouldn't survive. But most crashes are in between. 6-1 Maintenance Schedule..... See Fuses and Circuit Breakers on page 5-81. 2-15 Page 15 Vehicle theft is big business, especially in some cities. Although your vehicle has a number of theft-deterrent features, we know that nothing we put on it can make it impossible to steal. With the ignition off, press the LOCK button on the remote keyless entry transmitter to arm the system immediately after all doors and the trunk are closed. 5-85 Normal Maintenance Replacement Parts..... Remember to release the key from START as soon as the engine starts. If the engine is running and the THEFT SYSTEM light comes on, you will be able to restart the engine if you turn the engine off. 2-

33 Sunroof..... You can not see or smell CO. 4-1 Your Driving, the Road, and Your Vehicle.....

This could cause serious or even fatal injuries. In a crash the belt could go up over your abdomen. The belt forces would be there, not at your pelvic bones.

It also tells you some things you should not do with safety belts. Do not let anyone ride where he or she can not wear a safety belt properly.

2-14 Starting and Operating Your Vehicle..... See your dealer for more information. ® Your vehicle is equipped with the Passlock® theft-deterrent system. Passlock® is a passive theft-deterrent system. Passlock® enables fuel if the ignition lock cylinder is turned with a valid key. This feature stops the power door locks from locking when the key is in the ignition and the door is open. If the power door lock switch is pressed when a door is open and the key is in the ignition, all the doors will lock and the driver's door will unlock. If you are leaving the vehicle, open your door and set the locks from the inside. If you must drive with the trunk lid open or if electrical wiring or other cable connections must pass through the seal between the body and the trunk lid: system to its highest speed and select the control setting that will force outside air into your vehicle. The transmitter does not send the same signal twice to the receiver. These parts of the body are best able to take belt restraining forces. The safety belt locks if there's a sudden stop or a crash, or if you pull the belt very quickly out of the retractor. You can be seriously hurt if your shoulder belt is too loose.